
 
 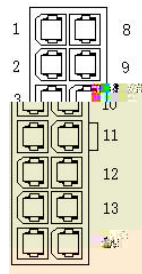




User Guide


 




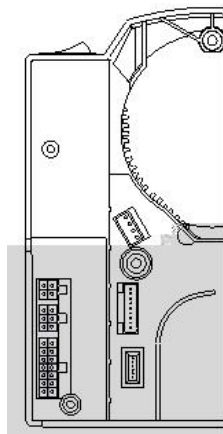


Thank you for purchasing our products.

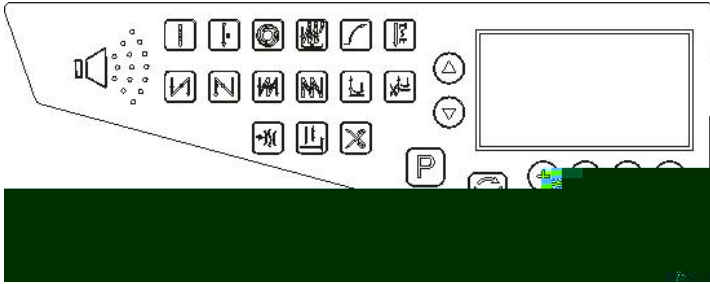For your use safety, please must read the instruction manual before use.


















		
		
Thread clamp		



Parameter code	Corresponding content	range	Factory setting	Content instruction and memo

**Parameter
code**

**Corresponding
content**

range

**Factory
setting**

Content instruction and mer

--	--	--	--	--

	0	1	2	3	4	5	6	7	8	9

	A	B	C	D	E	F	G	H	I	J
	K	L	M	N	O	P	Q	R	S	T
	E	L	n	n	o	P	q	r	S	f
	U	V	W	X	Y	Z				
	J	U	8		P	E				
